




RGB Gaming Mouse

Number of keys:7 buttons	Maximum polling rate :125Hz
Backlit : RGB color	Current consumption: max.100mA
Resistant braided cable:1.8m	Software: Support
Resolution: 1000--6400 dpi	System: Win7/8/10
Maximal tracking speed :32 ips	

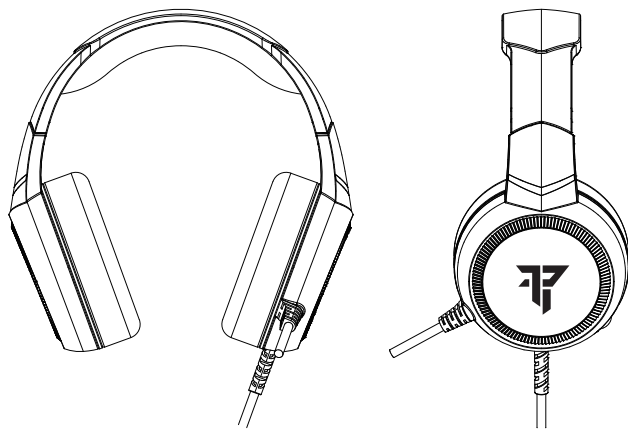

Gaming Headset


Frequency response :20-20000Hz	
Sound pressure level : 108±3dB	
Cable length: 1.8m	Membrane: 50 mm
Impedance: 32 Ohm	Connection type: 2*3.5 mm (3 pin) mini-jack
Headphones	Microphone
Impedancs : 32Ohm	Sensitivity : -56±3dB
Sensitivity: 105 ± 3 dB	Microphone sensitivity: -58 ± 3 dB
Frequency range: 20 – 20,000 Hz	Microphone frequency range: 30 – 16,000 Hz

TEMPEST
APOCALYPSE PRO

RGB KEYBOARD+GAMING MOUSE+MOUSEPAD+HEADSET
ALL PLUG AND PLAY

QUICK GUIDE

RGB MECHANICAL KEYBOARD

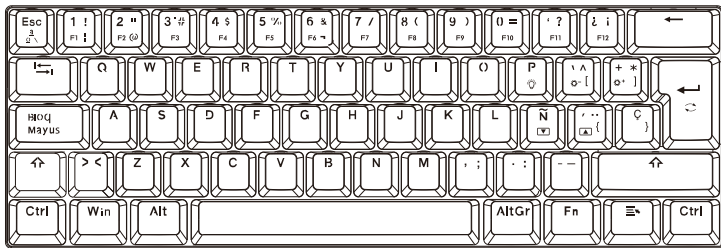

Multimedia function

FN+A	Play/Pause	FN+D	Next	FN+G	Volume -
FN+S	Previous	FN+F	Mute	FN+H	Volume +

Backlight

FN+P	Change the backlit mode ,total 12 backlight mode effects
FN+Enter	Change backlight colors(8 different colors)
FN++	Increase the brightness of backlight (4 lever brightness)
FN+`	Reduce the brightness of backlight (4 lever brightness)
FN+Ñ	Reduce the speed of backlight (4 lever speed)
FN+´	Increase the speed of backlight (4 lever speed)
FN+ right Shift	Backlight mode rest to factory mode(long press FN+Shift for 5 seconds)

- “Caps Lock ”indicator turns to white flashing light when max,brightness/speed, or min. Brightness/speed.
- When PC enter sleep and standby mode, keyboard backlight will switch off automatically after 10 minutes.
- When PC wake up, keyboard enter the previous mode.


Fn combination keys

FN+1	F1 function-Help
FN+2	F2 function-Rename
FN+3	F3 function-Search for files
FN+4	F4 function-Opens the address list in the browser
FN+5	F5 function-Refresh
FN+6	F6 function-Navigate to the address bar in explorer or browser
FN+7	F7 function-Not available in Windows only in DOS Windows
FN+8	F8 function-Press F8 to display the boot menu when starting the computer.
FN+9	F9 function-lower the volume in Windows Media Player.
FN+0	F10 function-menu Hold Shift+F10 to jump out of the desktop right- click menu.
FN+?	F11 function-Switch the image to full screen.

FN+¿	F12 function-Save as, when editing a picture or typing, quickly pop up and save as a file.
FN+ right Shift	(long fress for 5 seconds) Backlight mode back to factory mode

FN+ Win	Win Key Lock (the Win Key white light stays on in the state of Lock), press FN+ Win Key again and then release the Lock state (the Win Key LED works with the current special effect)
----------------	---

FN+ Right Alt/ -/Right Ctrl/Menu		←↕↘	
FN+U	Print Screen	FN+L	Page Up
FN+I	Scroll Lock	FN+M	Delete
FN+O	Pause Break	FN+,	END
FN+J	Insert	FN+.	Page down
FN+K	Home		

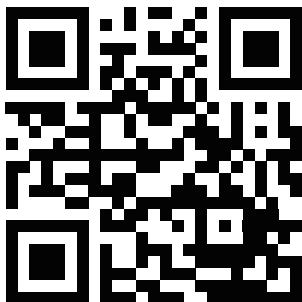

TEMPEST
MORE INFORMATION ON
www.tempestofficial.com